## **AA Battery Holder Instructions**

1) Remove QuikFinder from Base, remove battery from QuikFinder and note positive (+) battery contact.



3) Press AA battery electrodes into coin cell battery holder with red wire to positive (+) contact and black wire to negative (-) contact.



2) Place Quikfinder with knobs to right, side up as shown. 3/8<sup>th</sup> inch from back, make 1/4<sup>th</sup> inch deep notch in side using drill, clipper or other tool as shown. This will not void your warranty.



4) Tuck wires into notch and stick battery holder to side of QuikFinder using provided double sided tape.




QuikFinder to baseplate, remove Phillips screw from battery holder to remove battery holder cover plate and insert 2 AA batteries and you're ready to go!

5) Reattach



**90 day limited warranty: Rigel Systems, 26850 Basswood Ave, Rancho Palos Verdes CA, 90275** warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 5 years from the date of purchase under normal use. During this warranty period, **Rigel Systems** will, at its option, repair or replace the product without charge for parts or labor when delivered to **Rigel Systems** with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to **Rigel Systems** are your responsibility. This warranty does not apply if the product has been altered or repaired by anyone other than **Rigel Systems** or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. The product is not a toy. Keep away from children.

## **AA Battery Holder Instructions**

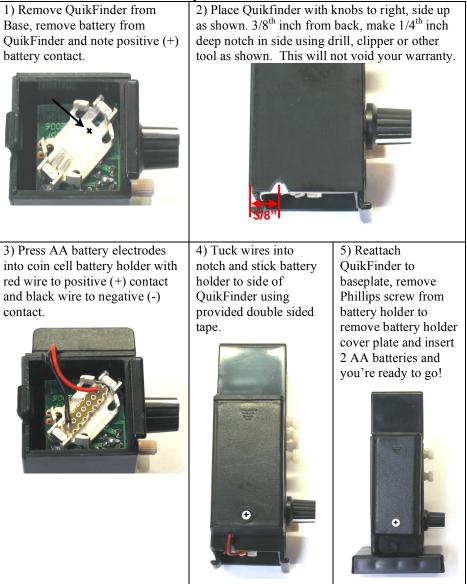

**90 day limited warranty: Rigel Systems, 26850 Basswood Ave, Rancho Palos Verdes CA, 90275** warrants to the original consumer purchaser of its product that the product will be free of defects in material or workmanship 5 years from the date of purchase under normal use. During this warranty period, **Rigel Systems** will, at its option, repair or replace the product without charge for parts or labor when delivered to **Rigel Systems** with proof of the date of purchase and a statement of the problem with the product. Shipping and handling charges to **Rigel Systems** are your responsibility. This warranty does not apply if the product has been altered or repaired by anyone other than **Rigel Systems** or has been subjected to purchaser abuse, accident, negligence or damage subsequent to purchase including battery damage to product. This warranty excludes incidental or consequential damages resulting from the product or use of the product. The product is not a toy. Keep away from children.